


# QR3PM

## 6A Momentary Controller Instructions 80\*60mm



### Momentary Controller for Quinetic Wireless Switch Installation Instructions

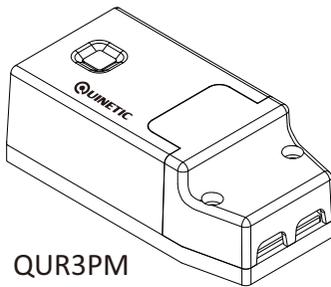

QR3PM

Read all instructions before installation

### Specifications

#### Technical Specifications:

Product Code: QR3PM  
Voltage range: 85-260V 50/60Hz  
Working environment temperature: -25°C ~ +50°C  
Control distance\*: 80m outdoor, 30m indoor  
Capacity: Up to 10 switches can be paired with one controller

Control method: pairing with Dimmable Quinetic Wireless Switch

**Integrated push-in terminals for quicker installation.**

**QR3PM Momentary Controller remains active as long as the paired switch is pressed.**

The power turns OFF once the switch is released.

Control Load: 6A  
Maximum Load: 500W LED  
1100W other loads\*\*


\*Distance comes from Quinetic laboratory test results. The actual distance in practical use might vary due to environmental difference.

\*\*Maximum load rating may vary depending on manufacturers specifications.

### Wireless receiving controller installation

1. Ensure that the power is turned off before installation.
2. The wireless receiver/controller line input should be connected using live and neutral cable from mains.
3. Output lines should be connected to load using cable rating suitable for 85-260V depending on voltage at site. (see diagram below).
4. Use the double-sided adhesive tape or screw to fix the wireless receiving controller.

#### Wiring Instructions

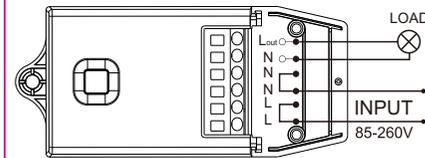

L: Live In  
N: Neutral Line  
Lout: Live Out

### Wireless receiving controller code pairing method

Wireless Quinetic energy switch and wireless receiving controller can be paired with any combination: a controller can be controlled by a maximum of 10 separate switches, a switch can be paired with an unlimited number of controllers.

The range of a switch may also be extended by using a second controller and putting it into "Bridging Mode". In order to extend the distance, the second controller must be paired with the switch and located between the switch and the controller that is out of range. The Bridging Mode can be enabled on the second controller by following the pairing steps below (Code Pairing Steps No.5). Once the second receiver is in Bridging Mode and paired with the switch it will forward the signal from the switch to the controller situated outside of controlling range.


### Code pairing steps:

1. Press the function button for 3 seconds and the indicator light begins to flash slowly. Then release the button and enter the single pairing state.
2. Press the wireless kinetic energy switch and the indicator light on the controller will go out, which means that the pairing is successful.
3. If you need to add more switches to the same controller, repeat the above process; each controller can store up to 10 switches, pairing in formation.
4. Single, double and triple switches follow the same pairing method.
5. In order to put the controller in to Bridging mode press the function button for 7 seconds. The indicator light will pulse continuously to indicated a successful "bridge". The bridging mode can be toggled off using the same pairing steps.
6. If the controller indicator light continues to pulse the controller will still function normally even if used with a single switch.

7. To clear the controller stored pairing information press function button for 10 seconds until the indicator light goes out - the pairing information will be deleted.



Press for 3 seconds to enter program mode

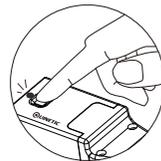

Press for 10 seconds to clear memory

### Precautions:


1. The momentary receiving controller works only with dimmable Quinetic switches (push type).
2. The wiring must be done in accordance with the method of installation illustrated.

3. Please note the maximum loading of an individual controller. Exceeding this maximum will result in blowing the fuse.
4. The controller has a non-replaceable internal fuse.
5. Do not short-circuit, it may cause permanent damage to the receiving controller.
6. The controller will remain "OFF" after a power cut until reactivated by a switch, saving energy, reducing fire risk and protecting your appliances.
7. Damage caused by incorrect installation and operation are not covered under warranty.

### Troubleshooting:

1. If pairing does not work first check if the indicator is lit. Re-pair in case the pair is lost after power failure.
2. If the receiver does not respond check the LED indicator. If this does not light check the power supply,

### Dimensions:

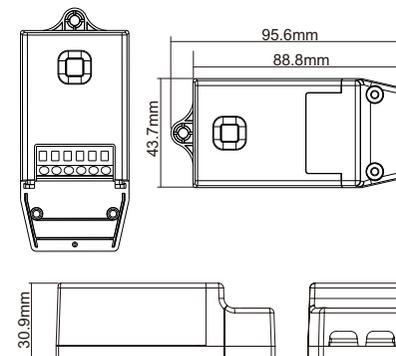

\*Please note: For more pairing information visit [www.tlc-direct.co.uk](http://www.tlc-direct.co.uk)